




Form A Washers ISO 7089 non chamfer & 7090 chamfered (DIN 125A)

A standard flat washer for use in just about any assembly. A flat washer's main task is to spread the load across a wider area, which comes in particularly useful when dealing with softer materials. Conforms to DIN 125.

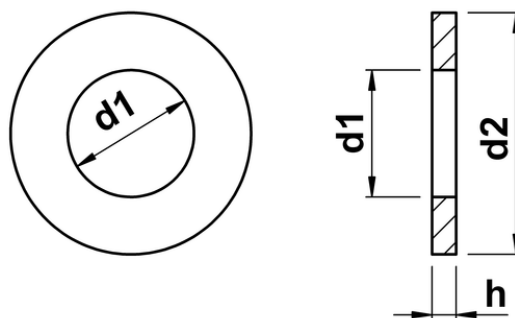

d1	for	d2	h
1.7	M1.6	4.0	0.3
1.8	M1.7	4.5	0.3
2.2	M2	5.0	0.3
2.5	M2.3	6.0	0.5
2.7	M2.5	6.0	0.5
2.8	M2.6	7.0	0.5
3.2	M3	7.0	0.5
3.7	M3.5	8.0	0.5
4.3	M4	9.0	0.8
5.3	M5	10.0	1.0
6.4	M6	12.0	1.6
7.4	M7	14.0	1.6
8.4	M8	16.0	1.6
10.5	M10	20.0	2.0
13.0	M12	24.0	2.5
15.0	M14	28.0	2.5
17.0	M16	30.0	3.0

d1	for	d2	h
19.0	M18	34.0	3.0
21.0	M20	37.0	3.0
23.0	M22	39.0	3.0
25.0	M24	44.0	4.0
28.0	M27	50.0	4.0
31.0	M30	56.0	4.0
34.0	M33	60.0	5.0
37.0	M36	66.0	5.0
40.0	M39	72.0	6.0
43.0	M42	78.0	7.0
46.0	M45	85.0	7.0
50.0	M48	92.0	8.0
52.0	M50	92.0	8.0
54.0	M52	98.0	8.0